



OWNER MANUAL FOR:

Cooking & baking products

Please read this manual carefully, and make sure to keep this manual in the place accessible by the user at any time.

THIS APPLIANCE IS INTENDED FOR PROFESSIONAL USE.

BEFORE THE FIRST USE:

- Check to make sure the appliance is undamaged. In case of any damage, contact your supplier immediately and do NOT use the appliance.
- Remove all the packing material and protection film (if applicable).
- Clean the appliance with lukewarm water and a soft cloth.
- Place the appliance on a level and steady surface, unless mentioned otherwise.
- Make sure there is enough clearance around the appliance for ventilation purposes.
- Position the appliance in such a way that the plug is accessible at all times.

CLEANING AND MAINTENANCE

- Always remove the plug from the socket before cleaning the appliance.
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- Never use aggressive cleaning agents, abrasives or chlorinated cleaners. Do not use any sharp or pointed objects. Do not use petrol or solvents!

SAFETY INSTRUCTIONS

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance can be used by persons aged from 18 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses
- Children shall not play with the appliance.

TROUBLESHOOTING

In case of malfunctions, please contact the dealer from whom you purchased the device.

DISPOSAL:

This product must not be disposed of with household waste. Instead, it must be taken to a collection point for the recycling of electrical and electronic equipment.

MANUFACTURER & IMPORTER:

The device complies with current EU standards and directives. If necessary, we will send you the corresponding declaration of conformity.

Imported by:

HCB B.V. - Irislaan 7 , 5595EH Leende , The Netherlands

Caution: Dismantling the unit by non-professional staff is prohibited, it will cause hazard.

